Informal document No. 19 (79th GRSG 16-20 October 2000 agenda item 11.3)

Table 1. Symbols, their Illumination and Colors Required for Safety or by Other Standards

| Column 1 | Column 2 | Column 3 | Column 4 | Column 5 |
|---|-------------------|------------|--------------|----------|
| ITEM | SYMBOL | FUNCTION | ILLUMINATION | COLOR |
| Master lighting switch | | Control | No | - |
| Telltale may not act as the telltale for the position (side) lamps. | -Ö- 1 | Telltale | Yes | Green |
| Headlamp high beams | | Control | No | - |
| | ≣O ı | Telltale | Yes | Blue 2 |
| Turn signals | ♦ | Control | | |
| | | Telltale | Yes | Green |
| Hazard warning signal | | Control | Yes | Red 2 |
| | | Telltale 4 | Yes | Red 2 |
| Front fog lamps | | Control | Yes | |
| | # 0 1 | Telltale | Yes | Green |
| Rear fog lamp | | Control | Yes | |
| | [O#] ₁ | Telltale | Yes | Yellow |
| Fuel level | | Telltale | Yes | Yellow |
| | or 🚮 | Indicator | Yes | |
| Engine oil pressure | 5 | Telltale | Yes | Red 2 |
| : | | Indicator | Yes | |
| Engine coolant temperature | ≈ 5 | Telltale | Yes | Red 2 |
| | | Indicator | Yes | |

| Column 1 | Column 2 | Column 3 | Column 4 | Column 5 |
|--|----------------------------|-----------|--------------|----------|
| ITEM | SYMBOL | FUNCTION | ILLUMINATION | COLOR |
| Electrical charging | | Telltale | Yes | Red 2 |
| Condition | | Indicator | Yes | |
| Windshield wiping system (continuous) | P | Control | Yes | |
| Power window lock | | Control | | |
| Windshield washing system | | Control | Yes | |
| Windshield washing and wiping system | \$ | Control | Yes | |
| Windshield defrosting and defogging system | W | Control | Yes | |
| | | Telltale | Yes | Yellow |
| Rear window defrosting and defogging system | Gyj) | Control | Yes | |
| | | Telltale | Yes | Yellow |
| Position, side marker, and/or end-outline marker lamps | ₹ 0€ _{1,6} | | | |
| Seat belt | A or A | Telltale | Yes | Red 2 |
| Airbag malfunction | | Telltale | Yes | Red 2 |
| Side airbag malfunction | | Telltale | Yes | Red 2 |
| Passenger Air bag off | PASS. 8 | Telltale | Yes | Yellow |
| Brake system malfunction may include Stop Lamp failure | BRAKE 8 | Telltale | Yes | Red 2 |

| Column 1 | Column 2 | Column 3 | Column 4 | Column 5 |
|--|--|-----------|--------------|----------|
| ITEM | SYMBOL | FUNCTION | ILLUMINATION | COLOR |
| Antilock brake system malfunction or Variable brake proportioning system malfunction | [ABS] | Telltale | Yes | Yellow |
| Antilock brake system malfunction in tow vehicle | (ABS) | Telltale | Yes | Yellow |
| Antilock brake system trailer fault | (ABS) | Telltale | Yes | Yellow |
| Speedometer | Km/h and MPH (upper or lower case) | Indicator | Yes | |
| Daytime running lamps | see S5.3.7.3 | Telltale | Yes | Yellow |
| Parking brake applied | (P) 9 | Telltale | Yes | Red 2 |
| Horn | Ь | Control | No | |
| Engine on-board diagnostics | | Telltale | Yes | Yellow |
| Heating System | <u>5555</u> | Control | Yes | |
| Air Conditioning System | or A/C | Control | Yes | |
| Automatic (park) transmission (reverse) control (neutral) position (drive) | P R N D 10 | Indicator | Yes | |
| Engine Stop | [S] 11 | Control | Yes | |
| Brake lining wear-out condition | [O] ₉ | Telltale | Yes | Yellow |
| Heating and/or air conditioning fan | \$ or &3 | Control | Yes | |

Notes to Table 1:

- Framed areas of the symbol may be solid.
- 2. Red may be red-orange. Blue may be blue-green.
- 3. The pair of arrows is a single symbol. When the controls or telltales for left and right turn operate independently, however, the two arrows may be considered separate symbols and be spaced accordingly.
- 4. Not required when arrows of turn signal telltales that otherwise operate independently flash simultaneously as hazard warning telltale.
- 5. Combination of the engine oil pressure symbol and the engine coolant temperature symbol in a single telltale is permitted.
- 6. Separate identification not required if function is combined with master lighting switch.
- Symbol not yet approved by ISO
- 8. English word or abbreviation not required after [insert 5 years after effective date of this rule].
- 9. If a single telltale is used to indicate more than one brake system condition, the brake system malfunction symbol must be used.
- 10. Letter "D" may be replaced by other alphanumeric character or symbol chosen by the manufacturer.
- 11. Use when engine control is separate from the key locking system

Table 2. Additional Symbols

| Column 1 | Column 2 | Column 3 | Column 4 |
|---|-----------------|---|---|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Headlamp cleaner | | Headlamp leveling | |
| Headlamp passing beams and position lamps | □ D 1,3 | Parking lamp (if separate) | P≒ |
| Interior compartment illumination | X | Long range light | ≡D |
| Loading light | | Elevated headlights Loading platform and rear axle may be omitted if appropriate | |
| Roof sign illumination | | Exterior bulb failure | -Ώ- |
| First trailer turn signals | \$1 \$ | Second trailer turn signals | \$2\$ |
| Working light | Jii. | Reading/map light | M |
| Instrument panel illumination | G JA | Beacon | [-[-[-]- |
| Taxi sign light | TAXI | Medical assistance sign light | <u></u> |
| Manual Choke | N | Diesel pre-heat | 90 |
| Hand Throttle | [)~(] | Odometer | km, if kilometers are shown, or miles, if miles are shown (upper or lower case) |

| Column 1 | Column 2 | Column 3 | Column 4 |
|------------------------------|------------------------|---|----------------------------------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Tachometer | RPM or r/min | Engine Start | $\left[\bigcap_{5}\right] _{5}$ |
| Engine malfunction | | Engine oil temperature | الما الما |
| Engine oil level | \frac{\frac{1}{2}}{2}. | Engine oil filter | SE-7: |
| Engine heating | | Electronic diesel control | (EE) |
| Engine coolant level | | Engine coolant heating | |
| Engine coolant fan | [*] | Engine inlet air filter | ` ! ⇒ |
| Engine inlet air pre-heat | -111> | Engine exhaust gas filter | ==3 |
| Turbo | A | Emission system malfunction | :! 3 |
| Low rear window washer fluid | | Electrically heated windshield | |
| Low windshield washer fluid | | Exterior mirror adjustment Symbol allows for mirror image and 90 degree rotation. Arrows can be omitted if the function does not exist. | or |
| Exterior mirror heating | or | Power folding exterior mirror | |
| Side window heating | | Windshield wiping system (intermittent) | P |

| Column 1 | Column 2 | Column 3 | Column 4 |
|---|----------------|--|---|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Rear window wiping system (continuous) | \Box | Rear window wiping system (intermittent) | Image: section of the content of the |
| Rear window washing and wiping system | ٦ | Rear window washing system | |
| Hood opener | * | Door lock | |
| Trunk opener | 4 | (Intentionally blank) | |
| Immobilizer/Theft protection | | Child lock | |
| (Intentionally blank) | · | (Intentionally blank) | |
| Automatic Vehicle Speed (cruise control) | | Steering circuit 1 | (21) |
| Steering circuit 2 | 2 | Steering fluid level | |
| Steering malfunction | ⊘! | Four wheel steer | |
| Traction control | (TC) | (Intentionally blank) | |
| Parking aid | Pw <u>⊾</u> | (Intentionally blank) | |
| Power on/Off switch | (b) | Owner's manual | |
| Child seat placement prohibited | | (Intentionally blank) | |
| Brake air/fluid pressure | | Low brake fluid condition | |
| Brake system malfunction, 1 st trailer | | (Intentionally blank) | |

| Column 1 | Column 2 | Column 3 | Column 4 |
|---|----------|-------------------------------------|--------------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Brake system malfunction, 2 nd trailer | | First trailer not equipped with ABS | (A) 1 |
| Second trailer not equipped with ABS | (As) 2 | Brake temperature | or |
| Retarder | (| Spring brake release | +() |
| Exhaust gas brake | | (Intentionally blank) | |
| Upper air outlet | أفتر | Lower air outlet | فهرو |
| Upper and lower air outlets | فترء | Defrost and lower air outlet | **** |
| Passenger compartment air filter | | Vent open | |
| Vent closed | | Fresh air | or |

| Column 1 | Column 2 | Column 3 | Column 4 |
|------------------------------|--------------------|----------------------------------|---------------------------------------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Recirculated air | or | Fresh air - Truck | 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 |
| Recirculated air – Truck | (G) o | Roof ventilation – Truck | [6 -8] |
| Sun shade | | Power Window | |
| (Intentionally blank) | | Lighter | 2 |
| Longitudinal seat adjustment | | Seat back recline | |
| Seat height adjustment | * | Seat cushion front height adj. | |
| Seat cushion rear height adj | 4 | Head restraint adjustment | |
| Seat lumbar adjustment | 4 | Seat heater | |
| (Intentionally blank) | T - | (Intentionally blank) | |
| Load tipping | [6 | Load tipping – trailer | -00 |
| Diverging flap release | (a) | Diverging flap release – trailer | -00% |
| Truck height control | (1) † (0) † (0) | Truck front height control | 100 |

| Column 1 | Column 2 | Column 3 | Column 4 |
|------------------------------------|------------------|---|----------------------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Truck rear height control | Fo ot | Trailer lock up | ₽ |
| Fifth wheel height adjustment | | Snowplow Platform and rear axle may be omitted from the symbol if appropriate | _ 100 J |
| Central lubrication | | (intentionally blank) | |
| Fuel economy | | Fuel temperature | |
| Fuel filter | | Fuel heating | |
| Fuel system malfunction | | Fuel shut off | |
| Transmission malfunction | (1) | Transmission fluid level | |
| Transmission temperature | (| Transmission converter temperature | [{}} |
| Transmission converter fluid level | [3] | Transmission converter malfunction | [8!] |

| Column 1 | Column 2 | Column 3 | Column 4 |
|---|-------------------------------|--|---------------------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| (Intentionally blank) | | Rear axle drive 4 x 4 | 7 |
| Front axle drive 4 x 4 | [九] | All wheel drive 6 x 6 | |
| Rear axle drive 6 x 6 | 7 | Front axle drive 6 x 6 | |
| Differential lock | l×1 | Differential lock, rear axle 4 x 4 | 1×1 |
| Differential lock, transfer case 4 x 4 | / ₁ / ₁ | Differential lock, front axle 4 x 4 | ر الم |
| Differential lock, bogie | [+1] | Differential lock, rear axle 6 x 6 | T |
| Differential lock, front axle 6 x 6 | | Differential lock, bogie 6 x 6 | |
| Differential lock, transfer case 6 x 6 | | Differential lock, transfer case and bogie 6 x 6 | [X] |
| Power take off #1 The number "1" should be omitted if only one power take off is available on a vehicle | 红 ¹ 。 | Power take off #2 | [₽ <mark>3</mark>] |
| Axle fluid level | H | Axle malfunction | юļ |
| Axle lifting | 00 | Winch | 7///4 |
| Door ajar | | Cab lock Platform and rear axle may be omitted if appropriate. | 6: o |

| Column 1 | Column 2 | Column 3 | Column 4 |
|---------------------|-----------------------|---------------------|----------|
| ITEM | SYMBOL | ITEM | SYMBOL |
| Tire malfunction | | Tire pressure | (+-+) or |
| Tire temperature | (<u>F</u>) | Intentionally blank | |
| Battery malfunction | [= ∌ ! | Battery fluid level | |
| Battery shut off | | | |

Notes to Table 2:

- 1. Framed areas of the symbol may be solid.
- 2. This symbol may be displayed with only one of the two arrows present
- 3. Separate identification not required if function is combined with master lighting switch.
- 4. Symbol not yet approved by ISO.
- 5. Use when engine control is separate from the key locking system.
- 6. If a single telltale is used to indicate more than one brake system condition, the brake system malfunction symbol must be used